

# Rear Blade Mounting and Rotating Instructions (PIRB)



**STOP!**

**Read your Tractor Operator's Manual and the safety messages on the implement!**

**Note:** Our Quick Attach allows the operator to quickly and easily adjust variable mounting points for each implement for both Cat 1 and 2 tractors.

## Mounting Blade To Tractor:

**Step 1:** Park tractor and implement on level ground. Slowly back tractor's 3-point controls to align the lower hitch link holes with the implement's lower hitch pins.

**Step 2:** Engage tractor park brake, shut tractor engine off and remove key before dismounting from tractor.

**Step 3:** With tractor's lower hitch arms aligned and positioned, slide the lower hitch arm holes onto the hitch pins. Secure lower 3-point arms on the hitch pins with lynch pins.

**Step 4:** Ensure that the lower hitch arms are blocked to prevent excessive side movement.

**Step 5:** Raise support stand all the way up and pin in the transport position.

**Step 6:** Connect top center link to the upper pivot hitch mounting hole using clevis pin and lynch pin.

**Step 7:** Return to tractor and slowly operate controls up and down to ensure that the drawbar, tires and other equipment on the tractor do not contact the rear blade.

**Step 8:** Manually adjust one of the two lower lift arms up or down to level the rear blade from left to right.

**Step 9:** Manually adjust length of the top center link to level the rear blade from front to rear.



Fig. 1 - Rotating Plate



Fig 2 - Reversed



Fig. 3 - Support Stand

## Rotating and Reversing Blade:

**Step 1:** To allow free rotation of the blade or to completely reverse the rear blade; begin by removing the pin and support stand. Support stand may be stored while in use as shown in Fig. 1.

**Step 2:** Remove the pin out from the lock plate. This allows free swing of the blade to the left, right, or for reversing. Our rear blade provides multiple settings in both forward and reverse operations. (See Fig. 2)

**Step 3:** Re-insert pin into locking plate when desired degree of blade angle and direction is achieved.

**Step 4:** To store simply remove pin from locking plate and rotate rear blade back into forward centered position and lock. If support stand was removed, replace and lock into position to avoid damage while stored. (See Fig. 3).



2630 S. Jefferson  
P.O. Box 1540  
Mt. Pleasant, TX 75456-1540  
1-800-527-8616  
903-572-1741 903-572-2798 Fax  
sales@priefert.com